



ATX (PC) Power Supply can be controlled in three ways:

- 1) Install jumper at J103 and control AC to power supply using back panel AC switch
- 2) unswitched AC direct to power supply turn on with switch shorting J103-1 to ground
- 3) unswitched AC direct to power supply turn on/off with normally open, momentary contact pushbutton connected to JP102